

 $0000 \ 0000 \ (000 \ 280) \ 000 \ 600 \ 0000 \ 00000000 \ 000$

□□□□ Advanatge

- $\hbox{-.} 000 600 0 000 280 00000 00000 000000$
- .(0000000) 00000 0000 0000 24 00 12 00000 000 -
- 12 00 000000 00000 -VDC .00000000
- 0000 MOV .00000 000000


_____ - (NO / NC / COM)

- 0000 0000 (NO / NC / COM)

- $-00000\ 00000\ 00000\ 000000\ 00000 -$





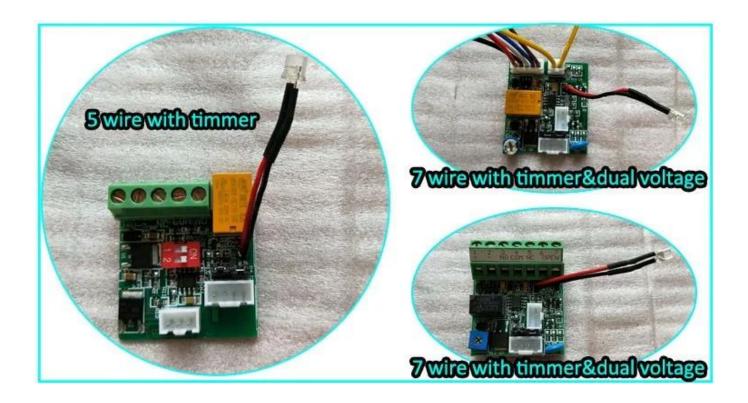

STANDARD INSTALLATION STEPS

Professional guidance, Rest assured





Fold the plate to 90°.



Close the door first, then place the upper side of template on door frame, while adjust the left side next to the door leaf.



Mark screw positions of armature plate and magnetic lock on door leaf and door frame respectively.



Drill holes based on the marked positions.



Make a combination based on the picture.



Strike the pin into the armature plate slightly (to avoid movement).



Make a combination based on the picture (add washer accordingly). The rubber ring must be added.



Place the rubber ring between armature plate and door leaf.



Use Allen key to remove the mounting plate from lock body.



Fix the mounting plate on the door frame according to the holes drilled earlier.



Use Allen key to screw the lock body on the mounting plate.



Close the door to test holding force. The angle between armature plate and magnetic lock can be adjusted by adding or reducing washers.



After all the appropriate procedures, the holding force can be maximized. Finally, fix the tamper screw.



Drill a hole Inside: Diameter is 8mm Outside: Diameter is16mm



Drill a hole Inside: Diameter is 8mm Outside: Diameter is 12.7mm



Inside:Drill a hole diameter is 8mm folding the plastic straight pin

Notice:

Thickness of Door Leaf:

350LBS: 44mm 600LBS: 50mm 800LBS: 48mm 1200LBS: 46mm

 $\ \ \square$ $\ \ \square$ Forwarder by SEA $\ \square$ AIR











ACM-Y280N

0000000000 000000 000000 000 000 :00 00000 (000 600 / 000 280) 0000 0 00000 000 0 00000 000 0 0000 00000 0000 |

ACM-Y180

 $00000\ 000\ 0\ 00000\ 000\ 0\ 00000.$

ACM-Y280







ACM-Y350

000 350 000000 00000 00000000 000 000 0 0000 000 :00 00000 (000 800) 00000 000 0 00000 000 0 000000.

ACM-Y500

 $00000\ 000\ 0\ 00000\ 000\ 0\ 00000.$

ACM-Y280-W

000000 000000 00000 00000000 000 :00 00000 (000 600) 000 280 00000 0 00000 000 0 00000 000 0 0000 000 00000 000.

You may need







ACM-Y100S

ACM-Y130

00000000 0000000 000 (NC / NO (000000

ACM-Y066

00000 000) 000 000 000) 000 41 \times 98 \times 130 :0000 0000







ACM-Y280-L

L- \hdots \hdots

ACM-Y280ZL

ACM-Y280-ZL

000 ZL 350 / 000 280 0000000 0000

 $1\ \square\ \square\square\square\square\ 24\ \square\square\square\square\ \square\ \square\ \square\square\square\square\square\square\square\square\square\square\square$

3 [] OEM / ODM [][[]

:00000 000 00 000 0 5

000000 00000 0000 30 ~ 7 0 000000 00000 5 ~ 1 00000 : 0000 0 6

000 00000 00000 00000 :00000 0 7: T / T 0 000 000 0 000000