



280 600 / em lock

600 24 12 VDC

5
6
L
8
W
4
6
H
(
)

[illegible]

 
[illegible]

□ □ □ □ □ ~~✗~~ ~~✗~~ 2 ~~✗~~ °C □ □ □ □ □


[illegible]

STANDARD INSTALLATION STEPS


Professional guidance, Rest assured

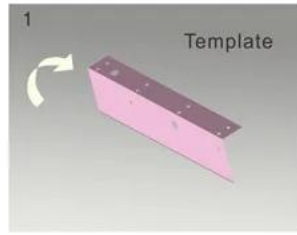

1 Fold the plate to 90° .

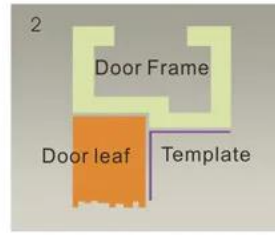 

 
2 Close the door first, then place the upper side of template on door frame, while adjust the left side next to the door leaf.

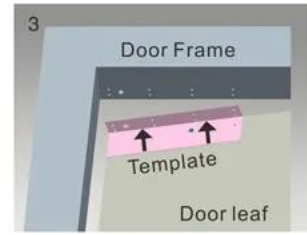


3 Mark screw positions of armature plate and magnetic lock on door leaf and door frame respectively.



 
4 Drill holes based on the marked positions.

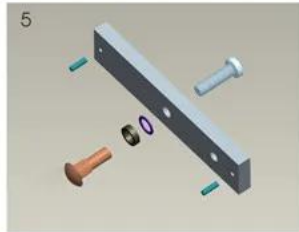

 
5 Make a combination based on the picture.

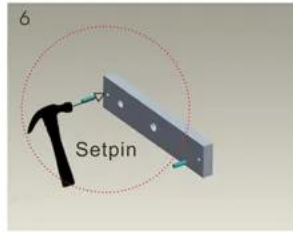

 6 Strike the pin into the armature plate slightly (to avoid movement).

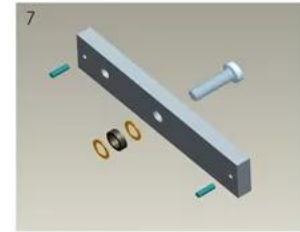

 
7 Make a combination based on the picture (add washer accordingly). The rubber ring must be added.

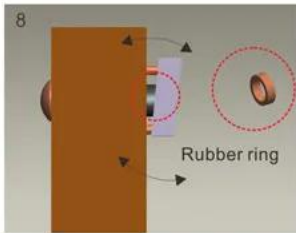


8 Place the rubber ring between armature plate and door leaf.



 
9 Use Allen key to remove the mounting plate from lock body.

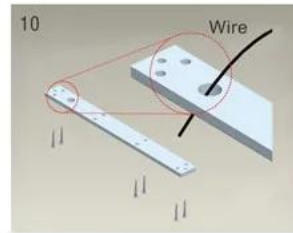

 
10 Fix the mounting plate on the door frame according to the holes drilled earlier.

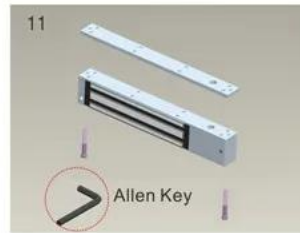

 
11 Use Allen key to screw the lock body on the mounting plate.

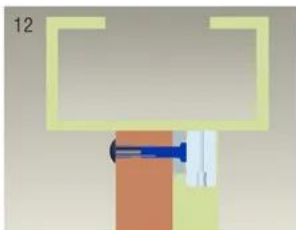

 
12 Close the door to test holding force. The angle between armature plate and magnetic lock can be adjusted by adding or reducing washers.

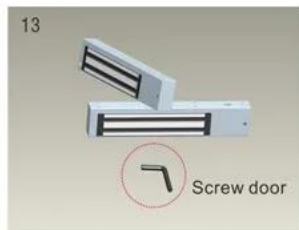

 
13 After all the appropriate procedures, the holding force can be maximized. Finally, fix the tamper screw.

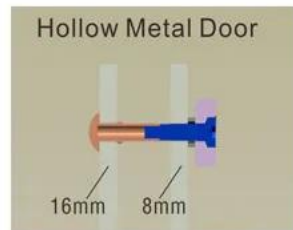

 Hollow Metal Door
Drill a hole
Inside: Diameter is 8mm
Outside: Diameter is 16mm

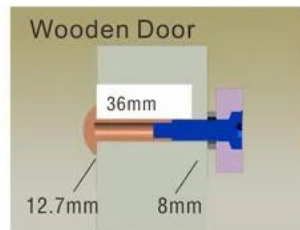

 Wooden Door
Drill a hole
Inside: Diameter is 8mm
Outside: Diameter is 12.7mm

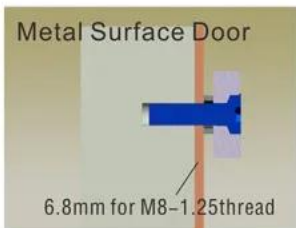

Metal Surface Door
Inside: Drill a hole
diameter is 8mm folding
the plastic straight pin

Notice:

Thickness of Door Leaf:

350LBS: 44mm

600LBS: 50mm

800LBS: 48mm

1200LBS: 46mm

□□□□□□ □□□□□□ □□□□□□

□□ □□□ □□□□□ DHL □ FEDEX □ TNT □ UPS □ EMS □ Forwarder by SEA □ AIR

. □□ □□□□ □□□□□□ □□□□ □□□□□□ □□□□ □□□□



0 00000000 00 000 5 0 000000 000 00000 1 :000000000 000 00000

□□□ 25 : □□□□□□□□ □□□□□ □ □□ 16 * 30 * 35 : □□□□□□□□ □□□.



You may need



ACM-Y280N

280) 280mm 280mm 280mm 280mm
280mm 280mm :280mm (280mm 600 / 280mm
280mm | 280mm 280mm 280mm 280mm
280mm

ACM-Y180

180) 180mm 180mm 180mm 180mm
180mm 180mm 2 (180mm 300 / 180mm
180mm 180mm 180mm 180mm :180mm.180mm

□□□□□ □□□ □ □□□□□ □□□ □.

ACM-Y280

280 □□□□□ □□□□□□□□ □□□ (□□□ 600) □□□
□□□□□ □□□ □ □□□□ □□□ :□□ □□□□□ □□□□□□
□□□□□ □□□ □ □□□□□ □□□ □.



ACM-Y280-L

L- □□□ □□□ 350 / □□□ 280 □ □□□
□□□□□□□□

ACM-Y180ZL

□□□ ZL 300 / □□□ 180 □□□□□□□ □□□□
□□□

ACM-Y280-ZL