










How to Use This Barcode Scanner?

1. For better scanning function, please hold this scanner at right angle, don't decode it at 90°.

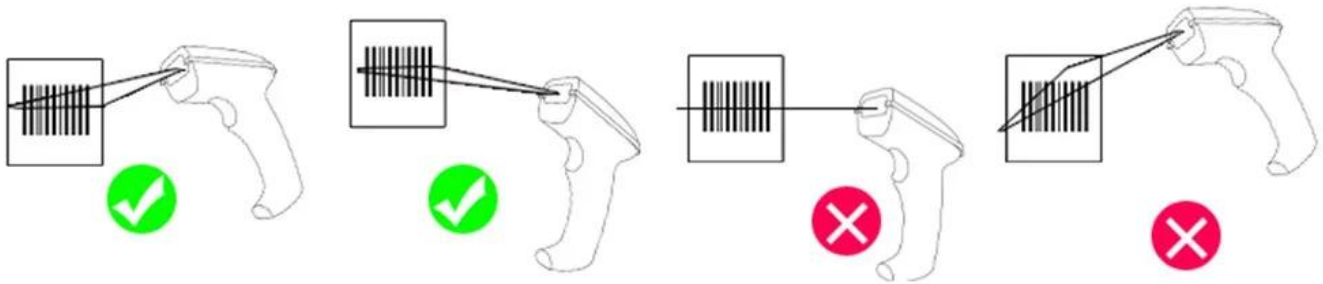

2. For truly decoding the barcode, scanning laser must cover the whole barcode.



How to Assemble/Disassemble the Cable?

Plug sharp things like toothpick or clip into the right hole and then pull out the cable easily.





Shakeproof



Super decoding



Compatible
different terminal



High Cost-Effective

WE PROVIDE THE MOST COMPLETE
PROFESSIONAL SCANNING APPLICATION



Logistics express
barcode



Supermarket
barcode



Medical
barcode



Factory
inventory



Machine
customization

Shipping





ACM26X RFID

125Khz wiegand 26/34
 115mm×75.5mm×16.8mm

ACM26G RFID

125Khz /13.56Mhz
 26/34 / RS232

KR600E RFID

125KHz ID / 13.56Mhz 26
 26



ACM-EMI-S RFID

125Khz EM

86 * 54mm

ACM-MF1 RFID

MF1 1K

ACM-ABS003 RFID

125Khz EM / 13.56Mhz / UHF

-ACM Goldbridge

-ACM Goldbridge

-

1

2

3 OEM / ODM

4 fashin

5

1

2

3

6

7 T / T Western Union Paypal

8 DHL FEDEX TNT UPS EMS SEA AIR

1.

2

Paypal

DHL FedEx TNT UPS

3.

4

5000 3-7 100,000 7-15

5

OEM

第6章

2020年RFID/NFC/RFID/RFID/RFID