

USBUSB

	ABS + PVC + PC
	* * 157mm * 71mm * 90mm
	5V / 300mA
	120±5g
	USB RS-232
	CMOS
	LED + LED
	32 MCU
	1D Codabar Code11 Code39 / Code93 UPC / EAN Code128 / EAN128 InterLeaved2of5 Matrix2of5 MSI CODE Standard2of5 2D QR PDF 417
	Code39 5 QR 870 PCS45
	5MIL CODE39 5--12 15MIL CODE39 4--25 10MIL CODE93 4--21 15 UPC / EAN 4--25 20MIL QR 4--25
	200 /
	5 * 5 -30 * 30
	LED
	35
	0-360° ±65° ±60°
	0 50°C/ 32 122°F
	0 50°C/ 32 122°F
	5-95
	1.5m










How to Use This Barcode Scanner?

1. For better scanning function, please hold this scanner at right angle, don't decode it at 90°.

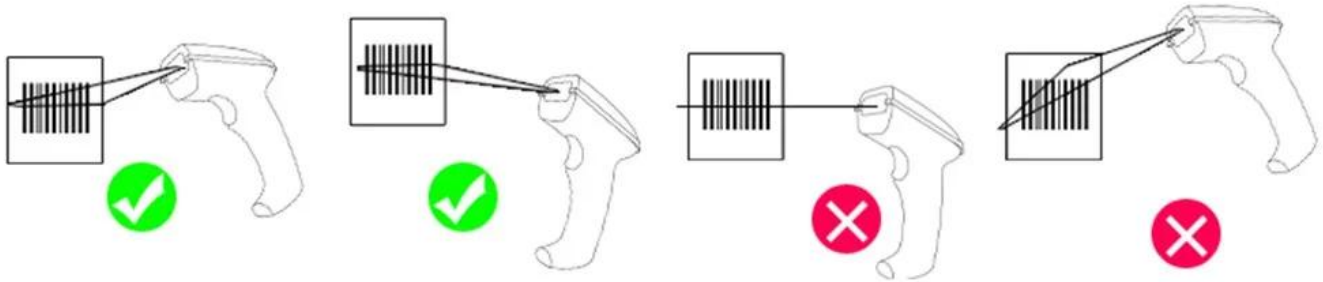

2. For truly decoding the barcode, scanning laser must cover the whole barcode.



How to Assemble/Disassemble the Cable?

Plug sharp things like toothpick or clip into the right hole and then pull out the cable easily.





Shakeproof



Super decoding



Compatible
different terminal



High Cost-Effective

WE PROVIDE THE MOST COMPLETE
PROFESSIONAL SCANNING APPLICATION



Logistics express
barcode



Supermarket
barcode



Medical
barcode



Factory
inventory



Machine
customization

Shipping



May Like





ACM26X RFID

125Khz wiegand 26/34
 115mm×75.5mm×16.8mm

ACM26G RFID

125Khz /13.56Mhz
 26/34 / RS232

KR600E RFID

125KHz ID / 13.56Mhz 26
 26





□□86 * 54mm

MF1 1K□□□

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □

--	--	--	--	--

- XXXXXXXXXXXXXXXXXXXXXXXXXACM GoldbridgeXXXXXXXXXX2XXXXX
-XXXXXXXXXXXXACM GoldbridgeXXXXXXXXXX

