 


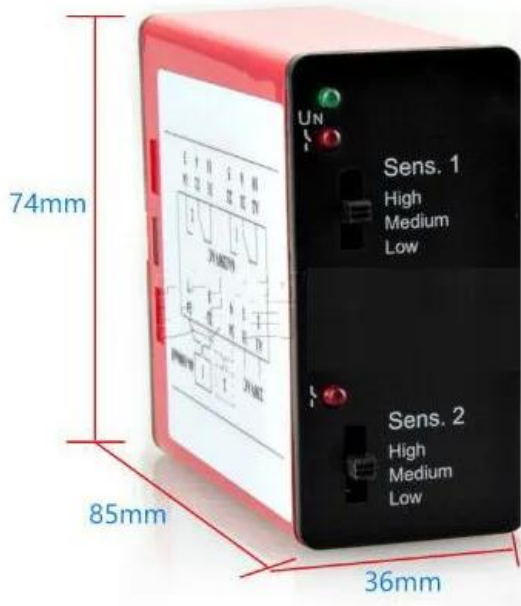

1.
2.
3.
4.
5.

$\square$



ACM703



 
 
■ Install Detector

The loop detectors must only be placed in dry rooms or control cabinets that are protected against all types of moisture and wetness. A distance of at least 10 mm from other devices must be maintained on each side. The ambient temperature must not exceed 65° C. The installation of the induction loop is described in other operating instructions.

■ Operation and Indication

When the power is applied, the red Power LED will glow and the detector is tuning, the green Check LED blink about 3 seconds. The green LED will also glow whenever a vehicle is detected passing over the inductive loop. If a loop fault exists the green LED will come on and flash indicating a fault.

■ Wiring Diagram

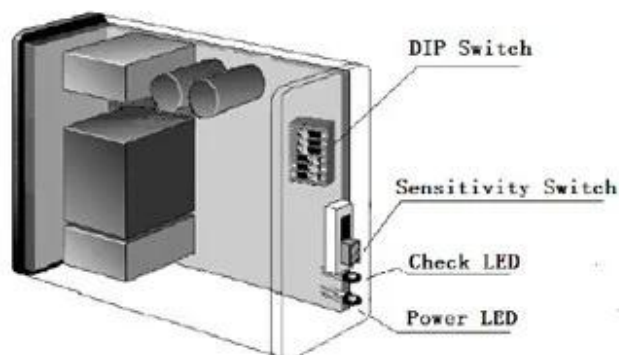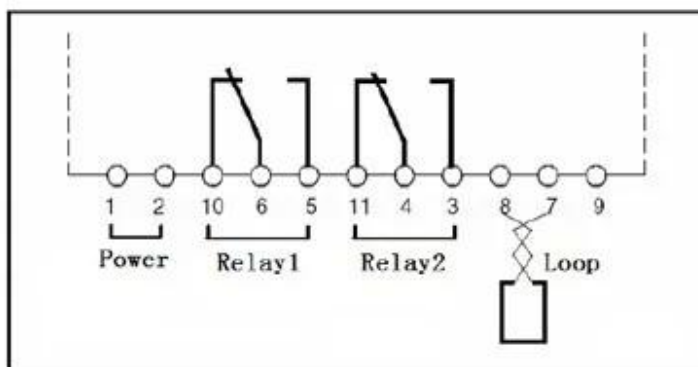

uhf ACM812A ACM802A ACM818A ACM801A
ACM801A 200





ACM812A
2-5m□□□□UHF□□□
Wiegand 26□□□RS232 / 485

ACM818A
10-20□□□□UHF□□□
Wiegand 26□□□RS232 / 485

ACM802A
8-10m□□□□UHF□□□
Wiegand 26□□□RS232 / 485



ACM801A
10-15m UHF
Wiegand 26RS232 / 485

ACM 8017
UHF
UHF + WIFI + GRPS

ACM 918K
UHF 4

條款

- 1 24
- 2
- 3 OEM / ODM
- 4 fashin desing &
- 5
- 1
- 2
- 3 2 - 3
- 6 1~5 7~30
- 7 T / T Western Union Paypal

條款

- 1
- 2 T / T Paypal
DHL FedEx TNT UPS
- 3
- 4 3-9 5000pcs 7-15 100,000pcs
- 5 OEM
- 6 RFID / NFC / RFID rfid 20

