 




□□□□□□□□□□□□□□□□□□□□□□□□
□EMID□FDX-B□ISO11784 / 85□□□□□

□ □



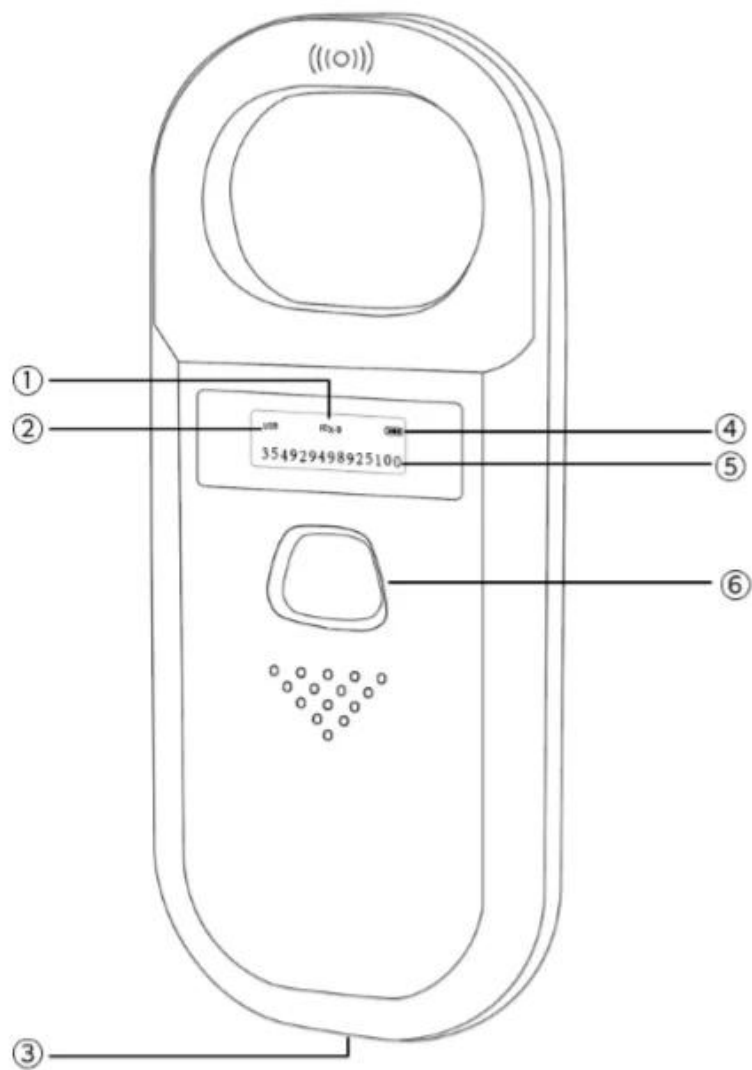

① Tag type

② USB connect

③ USB port

 
④ Battery status

⑤ Tag ID

⑥ Scan button


Operation

Turn on the device and scanning.
Press scan button to turn on the device and on scanning model



(((((0)))))

 The tag NO. will be displayed on screen if detect a tag, display
"No tag" if no tag is detected.



FDX-B
354929498925100

 


EMID
17850650E2



No tag

Device could be charged and uploaded data by USB cable.
When device is connected by USB," USB" will be displayed at
top left corner, and on charging status for battery status.



USB FDX-B
354929498925100

Press scann button for 3s, data will be uploaded from the
scanner, MAX 128 records.

After uploading successfully, display as below

The data can be upload in real time if scanner is connected by
USB cable when reading a tag.



USB
Upload Ok!

Scanner will be off after 120s without working.



Shipping





ACM26X RFID

125Khz wiegand 26/34
 115mm×75.5mm×16.8mm

ACM26G RFID

125Khz /13.56Mhz
 26/34 / RS232

KR600E RFID

125KHz ID / 13.56Mhz 26
 26



ACM-EMI-S RFID

125Khz EM

86 * 54mm

ACM-MF1 RFID

MF1 1K

ACM-ABS003 RFID

125Khz EM / 13.56Mhz / UHF

-ACM Goldbridge

-ACM Goldbridge

-

1

2

3 OEM / ODM

4 fashin

5

1

2

3 2-3

6 1 5 7 30

7 T / T Western Union Paypal

8 DHL FEDEX TNT UPS EMS SEA AIR

1.

2

Paypal

DHL FedEx TNT UPS

3.

4

5000 3-7 100,000 7-15

5

OEM

第6章

2010年RFID/NFC/RFID/RFID/RFID