



Two Pairing Method

 
One Scanner To One Receiver



Multiple Scanner To One Receiver



Long Transmission Range

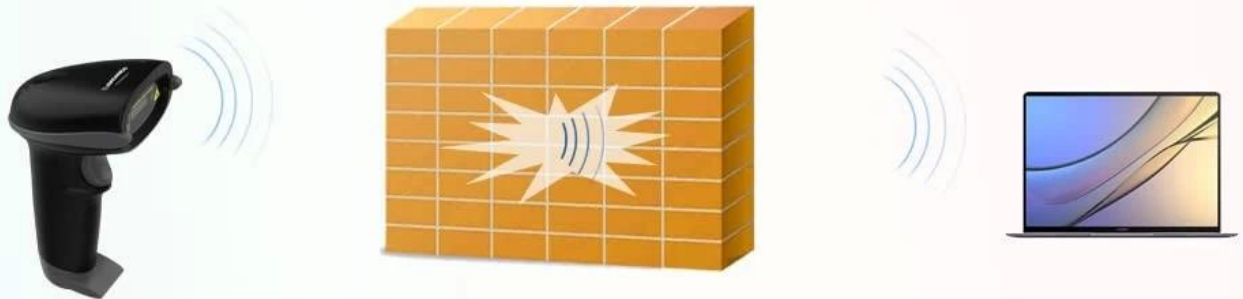


Under obstacles environment

Transmission Distance: 100m/ 328ft (Max)



In barrier free environment

 Transmission Distance: 400 m/ 437yd(Max)

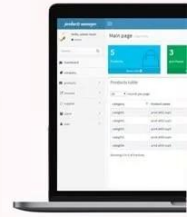


Instant Upload Mode

Synchronously upload barcode to your device when scanning



 16M

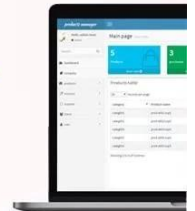

Storage Mode

Store barcodes in internal memory then upload when you need it.
(Save up to 100000 codes)

2-in-1 Connections

No driver needed

Wireless



USB Wired



Plus & Play



PC



Laptop



Tablet



Phone



Mac OS



Windows



Linux



30 Days Working Once Charging

scans 2000 barcodes each day in auto-off mode

 


2600mAh



How to Use This Barcode Scanner?

1. For better scanning function, please hold this scanner at right angle, don't decode it at 90°.

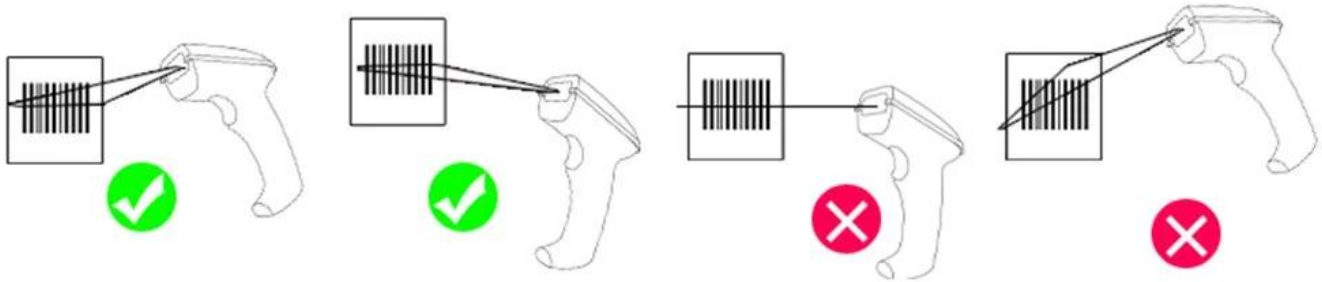

2. For truly decoding the barcode, scanning laser must cover the whole barcode.



How to Assemble/Disassemble the Cable?

Plug sharp things like toothpick or clip into the right hole and then pull out the cable easily.





Shakeproof



Super decoding



Compatible
different terminal



High Cost-Effective

WE PROVIDE THE MOST COMPLETE
PROFESSIONAL SCANNING APPLICATION



Logistics express
barcode



Supermarket
barcode



Medical
barcode



Factory
inventory



Machine
customization







Shipping







ACM26X RFID 读卡器

125Khz 读卡器 26/34 接口
尺寸 115mm×75.5mm×16.8mm

ACM26G RFID 读卡器

125Khz /13.56Mhz 读卡器
接口 26/34 /RS232

KR600E RFID 读卡器

125KHz 读卡器 ID/13.56Mhz 读卡器
26 接口





ACM-EMI-S RFID

125Khz EM

86*54mm

ACM-MF1 RFID

MF1 1K

ACM-ABS003 RFID

125Khz EM/13.56Mhz/UHF

- ACM Goldbridge 2
- ACM Goldbridge

