

USB
170*88*70
5V / 300mA
135±10
USB RS-232
CMOS
LED
32 MCU
UPC-A UPC-E / E1 EAN-13 EAN-8 ISBN / ISSN 39
39 ASCII 32 39 25 25 20f5 25
NW7 128 UCC / EAN128 ISBT128 93 11
USD-8 / /
350 /
10-650
LED
35
0-360° ±65° ±60°
0 50 oC / 32 122 oF
0 50 oC / 32 122 oF
5-95
1.5m

	ABS
	* * 170*88*70
	5V / 300mA
	135±10
	USB RS-232
	CMOS
	LED
	32 MCU
	UPC-A UPC-E / E1 EAN-13 EAN-8 ISBN / ISSN 39
	39 ASCII 32 39 25 25 20f5 25
	NW7 128 UCC / EAN128 ISBT128 93 11
	USD-8 / /
	350 /
	10-650
	LED
	35
	0-360° ±65° ±60°
	0 50 oC / 32 122 oF
	0 50 oC / 32 122 oF
	5-95
	1.5m














How to Use This Barcode Scanner?

1. For better scanning function, please hold this scanner at right angle, don't decode it at 90°.

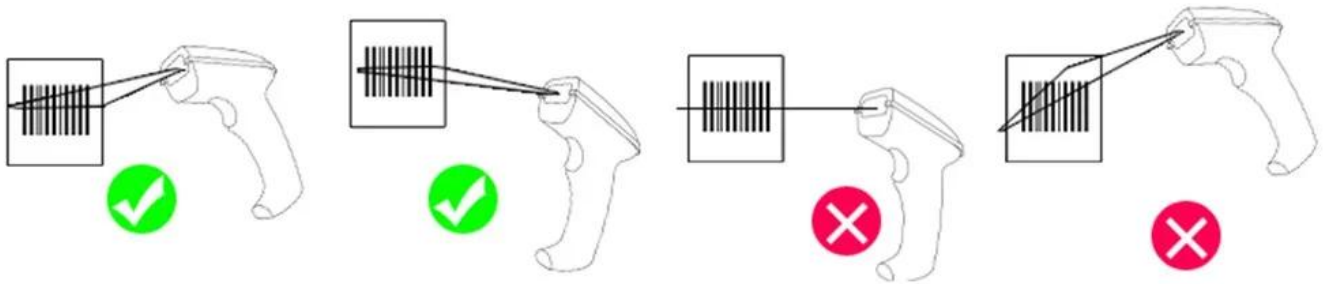

2. For truly decoding the barcode, scanning laser must cover the whole barcode.



How to Assemble/Disassemble the Cable?

Plug sharp things like toothpick or clip into the right hole and then pull out the cable easily.





Shakeproof



Super decoding



Compatible
different terminal



High Cost-Effective

WE PROVIDE THE MOST COMPLETE
PROFESSIONAL SCANNING APPLICATION



Logistics express
barcode



Supermarket
barcode



Medical
barcode



Factory
inventory



Machine
customization







Shipping







ACM26X RFID

125Khz wiegand 26/34
 115mm×75.5mm×16.8mm

ACM26G RFID

125Khz /13.56Mhz
 26/34 / RS232

KR600E RFID

125KHz ID / 13.56Mhz 26
 26





-ACM Goldbridge

