

[illegible]




Single channel / dual channel vehicle loop detector with automatic barrier gates used for Vehicle access control



■ Install Detector


The loop detectors must only be placed in dry rooms or control cabinets that are protected against all types of moisture and wetness. A distance of at least 10 mm from other devices must be maintained on each side. The ambient temperature must not exceed 65° C. The installation of the induction loop is described in other operating instructions.

■ Wiring Diagram

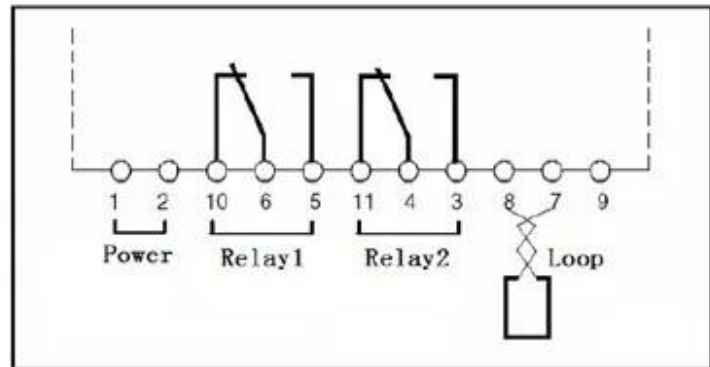

■ Operation and Indication

When the power is applied, the red Power LED will glow and the detector is tuning, the green Check LED blink about 3 seconds. The green LED will also glow whenever a vehicle is detected passing over the inductive loop. If a loop fault exists the green LED will come on and flash indicating a fault.

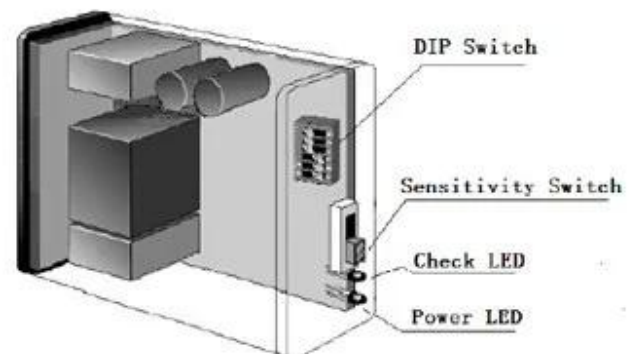[illegible]**EXW**

FCA FOB

CIF CFR

□ □ □ □ □ □ □ □ □ □ □ □

20RFID1
COFTA F E ...
EXW FOB FCT CIF CFR ...





ACM812A
2×5m 2600MHz UHF RFID
reader RS232 / 485

ACM818A
10-20m 2600MHz UHF RFID
reader RS232 / 485

ACM802A
8-10m 2600MHz UHF RFID
reader RS232 / 485



ACM801A
10-15m UHF
26RS232 / 485

ACM 8017
UHF
UHF + WIFI + GRPS

ACM 918K
UHF 4

1. 產品規格

1. 產品規格
2. 產品規格
3. OEM / ODM
4. 產品規格 & A
5. 產品規格
1. 產品規格
2. 產品規格
3. 產品規格 2/3
6. 產品規格 1/5 7/30
7. 產品規格 T / T

2. 產品規格

Q1. 產品規格
A. E

Q2. 產品規格
A. T / T Paypal
DHL / Federal Express / TNT UPS

Q3. 產品規格
A. 產品規格

Q4. 產品規格
A. 5000pcs 3-7 100,000pcs 7-15

Q5. 產品規格
A. OEM

Q6. 產品規格
20 RFID / NFC / RFID / keybod / RFID rfid 1

