



Intelligent remote control parking lock

Free your hands with smart remote control



Products Real Shot



Inside details shot





Parking Space Lock Installation Guide

Installation tools



Geological requirements: The installation ground must be level.

If your parking space is on earth, it needs to be poured with cement to the size of the parking space lock, and it can be installed.

Installation requirements: The parking space lock is easy to install. Our company does not provide door-to-door installation for the time being. If you have strong hands-on skills, you can borrow tools to install it yourself.



1. Mark the location where the screws are to be installed on the installation floor.



2. Drill a hole for controllable screw installation at the mark.



3. Use a hammer to hammer the screw into the drilled hole.



4. Tighten the screws with a suitable wrench



□□□□□□□□□□

□□□□□□UHF□□□□□□□□□□ACM812A□□□□ACM802A□ACM818A□ACM801A□□□□□□□□□□□□□□□□
□□□□□□□□ACM801A□□□□□□□□□□□□200 PC□□□□□□□□□□□□□□□□□□□□□□□□□□□□





ACM812A

2-5m UHF

Wiegand 26 RS232/485

ACM818A

10-20m UHF

Wiegand 26 RS232/485

ACM802A

8-10m UHF

Wiegand 26 RS232/485





ACM801A
 10-15m UHF
 Wiegand 26 RS232/485
 ACM 8017
 UHF
 uhfwifigrps
 ACM 918K
 UHF 4-Antenna

- 1
- 2
- 3 OEM/ODM
- 4

