 




EMID FDX-B
ISO11784 / 85

[illegible]



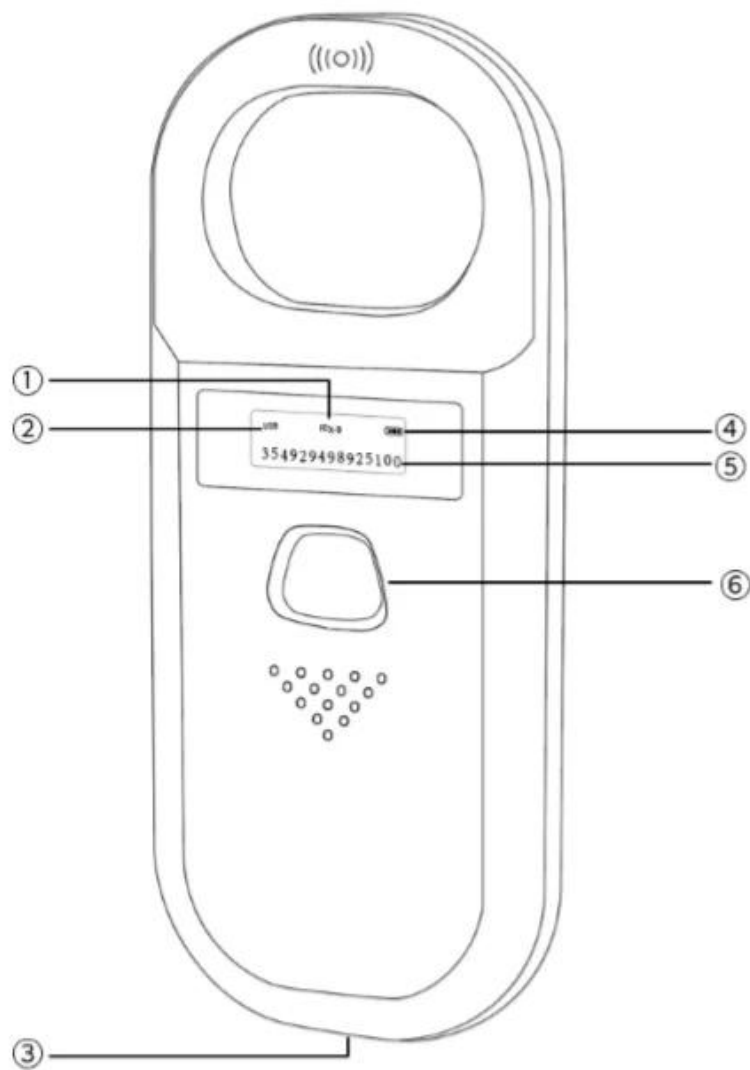

① Tag type

③ USB port

⑤ Tag ID

 
② USB connect

④ Battery status



⑥ Scan button

Operation


Turn on the device and scanning.
Press scan button to turn on the device and on scanning model



  The tag NO. will be displayed on screen if detect a tag, display
"No tag" if no tag is detected.



 Device could be charged and uploaded data by USB cable.
When device is connected by USB," USB" will be displayed at
top left corner, and on charging status for battery status.



Press scann button for 3s, data will be uploaded from the
scanner, MAX 128 records.
After uploading successfully, display as below



The data can be upload in real time if scanner is connected by
USB cable when reading a tag.

Scanner will be off after 120s without working.



Shipping





ACM26X RFID

125Khz wiegand 26/34
115mm×75.5mm×16.8mm

ACM26G RFID

125Khz /13.56Mhz
26/34 / RS232

KR600E RFID

125KHz ID / 13.56Mhz
26



ACM-EMI-S RFID

125Khz EM

86 * 54mm

ACM-MF1 RFID

MF1 1K

ACM-ABS003 RFID

125Khz EM / 13.56Mhz / UHF

-ACMGoldbridge2

-ACM Goldbridge

-

124

2

3OEM / ODM

4

5

1

2

323

615730

7T / TPaypal

8DHLFEDEXTNTUPSSEAAIR

Q1.

A

Q2.

A / T / TPaypal

DHLFedExTNT UPS

Q3.

A

Q4

A5000pcs3-7100,000pcs7-15

Q5

