


(Picture)

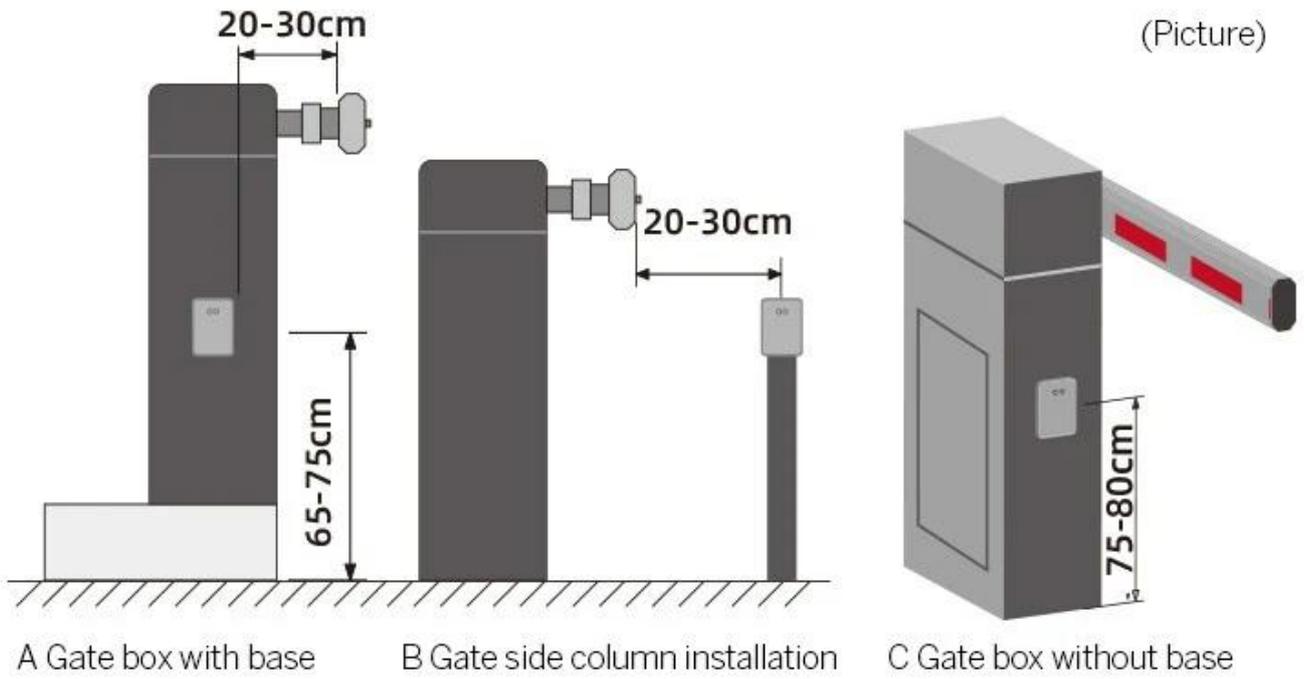

A Gate box with base

B Gate side column installation

C Gate box without base






道闸雷达

额定功率 1.5W 电源 DC12V
黄、蓝、棕线不能接触雨水，
请绝缘或悬空处理。

■ Install Detector


The loop detectors must only be placed in dry rooms or control cabinets that are protected against all types of moisture and wetness. A distance of at least 10 mm from other devices must be maintained on each side. The ambient temperature must not exceed 65° C. The installation of the induction loop is described in other operating instructions.

■ Wiring Diagram

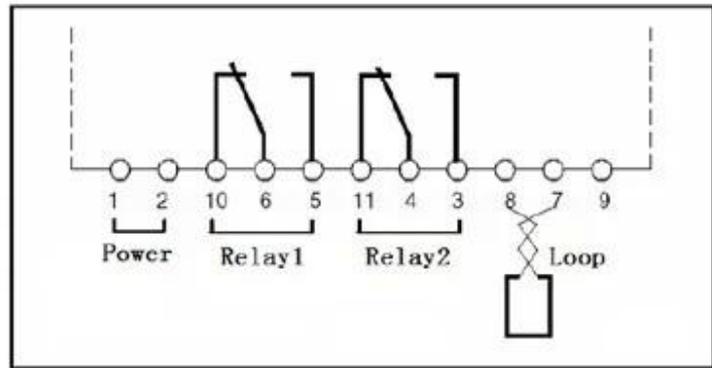

■ Operation and Indication

When the power is applied, the red Power LED will glow and the detector is tuning, the green Check LED blink about 3 seconds. The green LED will also glow whenever a vehicle is detected passing over the inductive loop. If a loop fault exists the green LED will come on and flash indicating a fault.

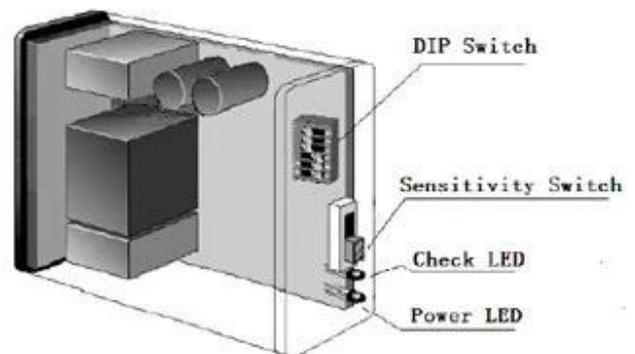

UHF ACM812A ACM802A ACM818A ACM801A
 ACM801A 200 PC []





ACM812A

2-5m UHF

Wiegand 26 RS232/485

ACM818A


10-20m UHF

Wiegand 26 RS232/485

ACM802A

8-10m UHF

Wiegand 26 RS232/485

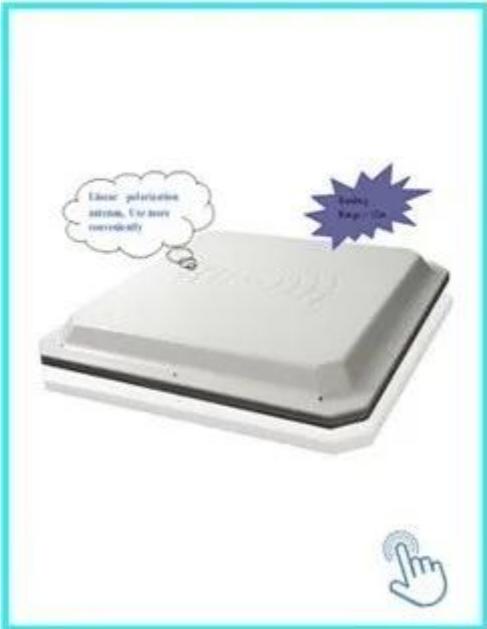

ACM801A

10-15m UHF
Wiegand 26 RS232/485
ACM 8017
UHF
uhfwifgrps
ACM 918K
UHF 4-Antenna

RFID

- 1 24
- 2
- 3 OEM/ODM
- 4
- 5
- 1
- 2
- 3 2-3
- 6 15 7 30
- 7 T/T Western Union PayPal

RFID

- Q1
A
- Q2
A T/T PayPal Western Union
DHL FedEx TNT UPS
- Q3
A
- Q4
A 5000pcs 3 7 100,000pcs 7 15
- Q5
A OEM
- Q6
RFID NFC RFID RFID RFID 1