



Two Pairing Method


One Scanner To One Receiver



Multiple Scanner To One Receiver



Long Transmission Range

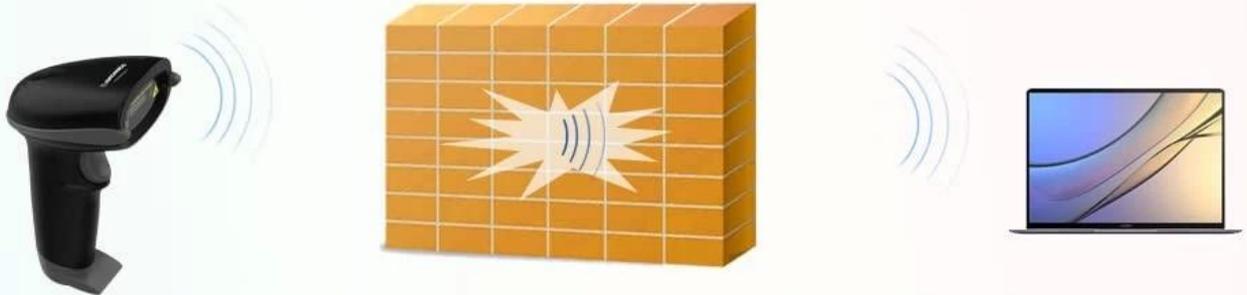

Under obstacles environment

Transmission Distance: 100m/ 328ft (Max)



In barrier free environment

Transmission Distance: 400 m/ 437yd(Max)



Instant Upload Mode

Synchronously upload barcode to your device when scanning



16M



Storage Mode

Store barcodes in internal memory then upload when you need it.
(Save up to 100000 codes)

2-in-1 Connections

No driver needed


Wireless



USB Wired



Plus & Play

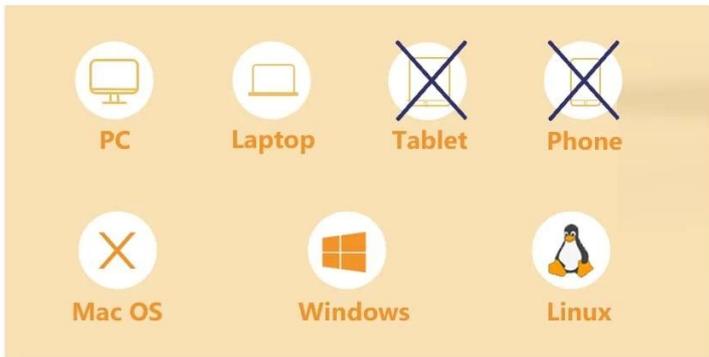

30 Days Working Once Charging

scans 2000 barcodes each day in auto-off mode




2600mAh



How to Use This Barcode Scanner?

1. For better scanning function, please hold this scanner at right angle, don't decode it at 90°.

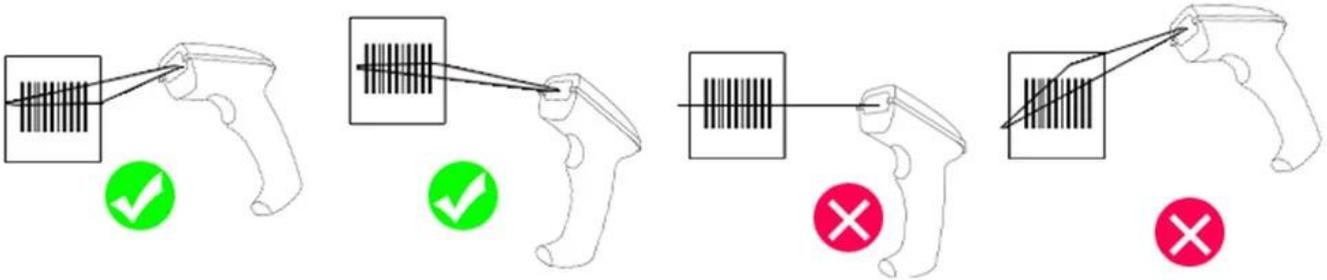

2. For truly decoding the barcode, scanning laser must cover the whole barcode.



How to Assemble/Disassemble the Cable?

Plug sharp things like toothpick or clip into the right hole and then pull out the cable easily.





Shakeproof



Super decoding



Compatible
different terminal



High Cost-Effective

WE PROVIDE THE MOST COMPLETE
PROFESSIONAL SCANNING APPLICATION



Logistics express
barcode



Supermarket
barcode



Medical
barcode




Factory
inventory



Machine
customization



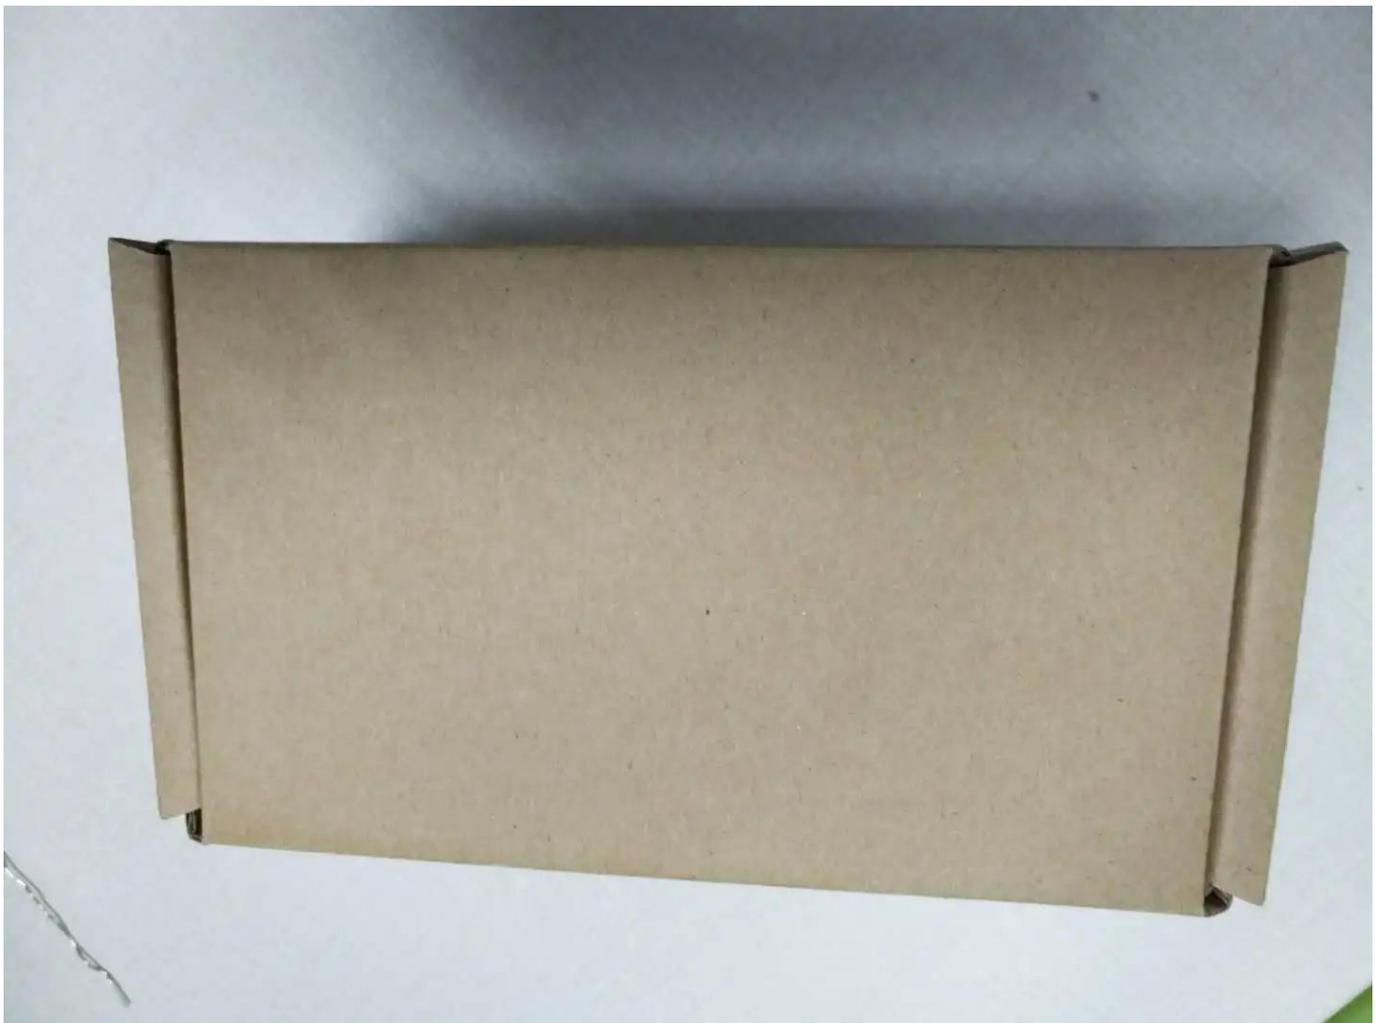

Shipping







ACM26X RFID 00 000

125Khz wiegand 26 /34 00 000,
00:115mm×75.5mm×16.8mm

ACM26G RFID 00 000

125Khz /13.56Mhz 00
Wiegand 26/34 /RS232

KR600E RFID 00

125KHz 00 ID/ 13.56Mhz 00 000,
Wiegand 00 2600





ACM-EMI-S RFID □□

125Khz EM □□ □□
□□ 86*54mm

ACM-MF1 RFID □□□

MF1 1K □□ □□

ACM-ABS003 RFID □□□□

125Khz EM/13.56Mhz/UHF Keyfob, □
□ □□: □□□, □□□, □□□, □□□, □□, □□

□□ □□

- □□□ □□ □□ □□ □□ □□□□ □□□□, ACM Goldbridge□ □□ □□□ □□ 2□ □□□ □□□□□□.
- □□□ □□□ □□ ACM Goldbridge□□ □□ □□□ □□□□□.

- 0000 0000 0000 0000 000000.

0000 0000

- 1, 00 000000 2400 0000 0000 000000.
- 2, 00000 0000 0 0000, 0000 00000 0 00 0000 00000 00
- 3, 0000 OEM/ODM
- 4, 0000, fashin desing, 000000 0 0000 00 00, 00 00000
- 5, 00 0 0000:
- 1), 00 0000 000000 00 0000 000000 00 0000 000000.
- 2), 00 0000 00 00 0 000000.
- 3) 0000 0000 00 000000 00 00 0000 00 000000 2-30 0000 000000.
- 6, 0 00 00 : 00 0000 00 0 1 ~ 5 0, 00 0000 00 7 ~ 30 0
- 7, 00: 0000 0000 00 0000 00 0000 0 00000: T/T, Western Union, Paypal
- 8, 00: 0000 DHL, FEDEX, TNT, UPS, EMS, SEA 0 AIR0 0000000 0000 00 0000 00 0000 0000 00 0000000 0000 00 0 0000.

00000 00

Q: 1. 0000 0000 0 0000?

A: 000000 00 0000 00 0000 00000000. 00 00 00 00 0 00 00 0000 0000 0000000 0000 00 0000 000000000.

Q: 2. 00 0 0000 0000 0000?

A: 00 00 0 T/T, 0000, 0000 0000.

0000 00, 00 00 00(DHL, FedEx, TNT UPS 0)00 0000 0 00000.

Q: 3. 0000 000000 00 0000 0000 00 0 00000?

A: 0000 000000 00 0000 0000 0 00, 0000 000000 00 0000 0000 0 00000.

00:4. 0000 0000 00 00 0 0000?

A: 0000 00 00000. 0000000 5000pcs0 00 3-70, 100,000pcs0 00 7-150

00:5. 0000 0000 00 0000 0 00000?

A : 00, 00, 00 0 0000 000000 00 00 0000 0000000000. OEM 0000 00 000000.

Q:6. 0000 00 0000000 0000 000000?

0000 200 00 000000 RFID 00/NFC 00/RFID 0000/RFID 00000, RFID 00 0 0000 00 0000 00 0 00000 0 0000000.