
















## How to Use This Barcode Scanner?

1. For better scanning function, please hold this scanner at right angle, don't decode it at 90°.

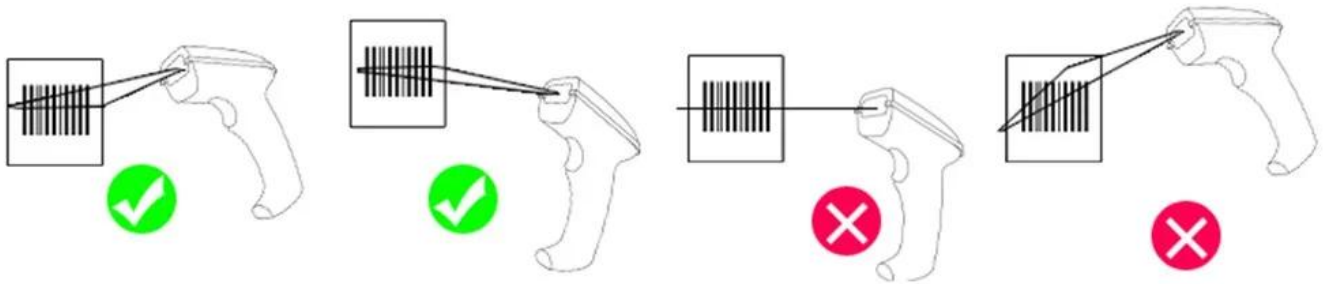

2. For truly decoding the barcode, scanning laser must cover the whole barcode.



---

## How to Assemble/Disassemble the Cable?

Plug sharp things like toothpick or clip into the right hole and then pull out the cable easily.





Shakeproof



Super decoding



Compatible  
different terminal



High Cost-Effective

WE PROVIDE THE MOST COMPLETE  
PROFESSIONAL SCANNING APPLICATION



Logistics express  
barcode



Supermarket  
barcode



Medical  
barcode



Factory  
inventory



Machine  
customization





## Shipping







### ACM26X RFID 26 34

125Khz wiegand 26/34 26 34,  
 尺寸 : 115mm × 75.5mm × 16.8mm

### ACM26G RFID 26 34

125Khz /13.56Mhz 26  
 尺寸 26 / 34 / RS232

### KR600E RFID 26

125KHz 26 ID / 13.56Mhz 26 34,  
 Wiegand 26 26





### ACM-EMI-S RFID 卡片

125Khz EM 卡片 卡片

卡片 86 \* 54mm

### ACM-MF1 RFID 卡片 卡片

MF1 1K 卡片 卡片

### ACM-ABS003 RFID 卡片 卡片

卡片

125Khz EM / 13.56Mhz / UHF

Keyfob, 卡片 卡片 : 卡片, 卡片, 卡片, 卡片, 卡片, 卡片

卡片 卡片

-ACM Goldbridge 卡片 卡片 卡片 卡片 卡片 卡片 卡片 卡片. ACM Goldbridge 卡片 卡片 卡片 2 卡片 卡片 卡片.

