


























# STANDARD INSTALLATION STEPS


Professional guidance, Rest assured

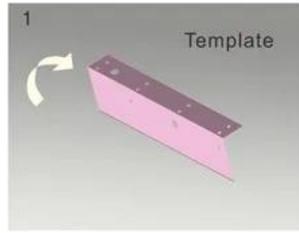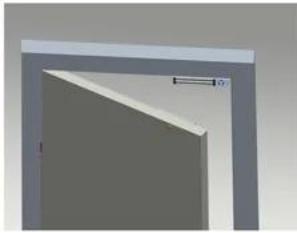

1 Fold the plate to 90° .

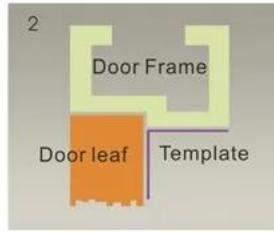


2 Close the door first, then place the upper side of template on door frame, while adjust the left side next to the door leaf.

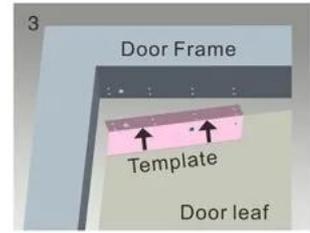


3 Mark screw positions of armature plate and magnetic lock on door leaf and door frame respectively.




4 Drill holes based on the marked positions.

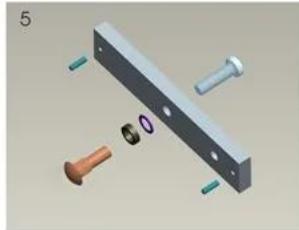


5 Make a combination based on the picture.

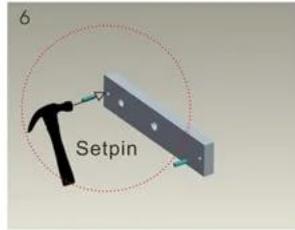

6 Strike the pin into the armature plate slightly (to avoid movement).

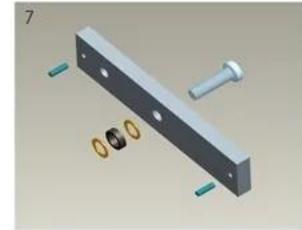


7 Make a combination based on the picture (add washer accordingly). The rubber ring must be added.

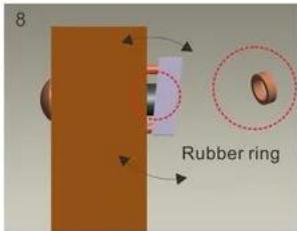

8 Place the rubber ring between armature plate and door leaf.




9 Use Allen key to remove the mounting plate from lock body.

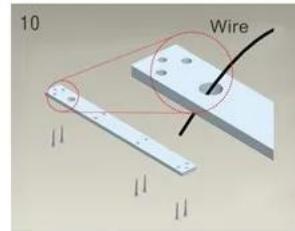


10 Fix the mounting plate on the door frame according to the holes drilled earlier.




11 Use Allen key to screw the lock body on the mounting plate.

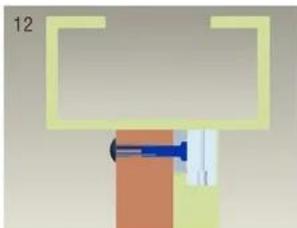


12 Close the door to test holding force. The angle between armature plate and magnetic lock can be adjusted by adding or reducing washers.

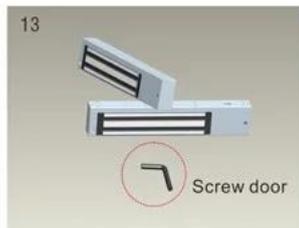


13 After all the appropriate procedures, the holding force can be maximized. Finally, fix the tamper screw.

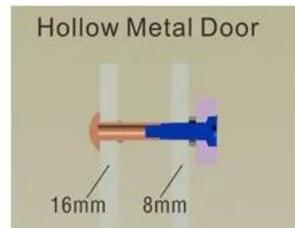

Hollow Metal Door  
Drill a hole  
Inside: Diameter is 8mm  
Outside: Diameter is 16mm

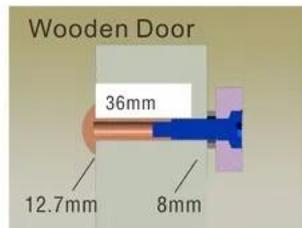

Wooden Door  
Drill a hole  
Inside: Diameter is 8mm  
Outside: Diameter is 12.7mm

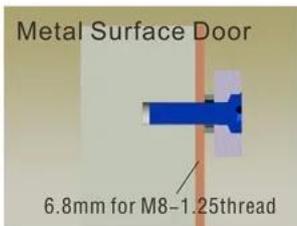

Metal Surface Door  
6.8mm for M8-1.25thread  
Inside: Drill a hole diameter is 8mm folding the plastic straight pin

## Notice:

Thickness of Door Leaf:

350LBS: 44mm

600LBS: 50mm

800LBS: 48mm

1200LBS: 46mm



**3** **!!!**

20 ! " " ! ! .



**ACM-Y100S 2PIN**

100 MA / 900Mapower 2 pin

**ACM-Y500A.**

NC

## ACM-Y100S 5PIN

ACM-Y100S 5PIN  
ACM-Y100S 5PIN  
5 ACM-Y100S 5PIN

### You May Need

---



## ACM-Y280.

/ ( 280) ACM-Y280 ACM-Y280  
( 600)

## ACM-Y100S.

مفتاح كهربائي مغناطيسي  
مفتاح كهربائي (NC / NO) مغناطيسي  
مفتاح كهربائي مغناطيسي مغناطيسي مغناطيسي

### ACM-Y066.

(مفتاح كهربائي مغناطيسي) مفتاح كهربائي مغناطيسي  
130 :مفتاح كهربائي مغناطيسي x98x41mmworking

deadbolt قوس لإغلاق الباب



### ACM-Y700.

مفتاح كهربائي مغناطيسي مغناطيسي مغناطيسي مغناطيسي  
مفتاح كهربائي مغناطيسي مغناطيسي مغناطيسي مغناطيسي

## ACM-Y600.

تتميز هذه الوحدة بتصميمها المدمج الذي يسهل تركيبها في أي مكان، كما أنها تتميز بقدرة عالية على التحمل في البيئات القاسية.

## ACM-Y601.

تتميز هذه الوحدة بتصميمها المدمج الذي يسهل تركيبها في أي مكان، كما أنها تتميز بقدرة عالية على التحمل في البيئات القاسية.

مجموعة كاملة حل السيارات التحكم في الوصول



## ACM-WG02.

تتميز هذه الوحدة بتصميمها المدمج الذي يسهل تركيبها في أي مكان، كما أنها تتميز بقدرة عالية على التحمل في البيئات القاسية. تدعم الاتصال بالبريد الإلكتروني (RS232، RS485) أو بروتوكول TCP / IP (Communication).

### ACM-K2A.

No Touch Door Release ExitButton□

K2A: 115 \* 40mm□ K2B: 86 \* 86mm

### ACM-Y806-3A.

12 □□□□□ □□□□□□ □□□□□□□□ □□□□V  
/ 3A



### ACM-Y280.

/ □□□ 280) □□□□□ □□□□ □□□□□□□□ □□□  
□□□ 600)

### ACM-26X.

125 □□□□ □□□□ Wiegand 26/44 □□□□□□  
□□ 16.8 × □□ 75.5 × □□ 115 :□□□□□□

# ACM-EMI-S

125 0000 0000 em 00000 00000

## 0000 3 00 0000000 0000 000 00000000 000000 000 0000 !!!

000000 00 00000 000000 00 000000 000000 20 0000 00 0000000 000000 00000 00 0000000 0000000 00000 00000000 0000  
!00000 "000000" 0000 00000 000000 00 0000000000 0000000 00000 000000 !0000000 00 0000000 00000  
0000000000 00 0000000 000000 00000 00 0000 000000 00 0000000 0000000 0000000 000000 00000 00000 00000.

## 00000000

- 1 00 00000 24 00000 00 00000000000 00 00 000000
- 0000000000 0000 0000000 000000 00 0000 0000000 0000000 0000000 0000000 02
- 3 00 oem / odm 00000000
- 000000 0000000 00000 0000 04 desing 0000000 00000 00000 00000000 000000 0000
- :000000 0000 00 00000 05
- 00000000 0000 0000000 00 00000 000000 00000 0000000000 00000 0(1
- 000000 0000 0000 000000 00000 0000 0000 0000000000 00000 0(2
- 00000000 00000 00000 00 000000 0000 0000 000000 3-2 00000 000000 0000000000 00000 0(3
- 00000000 00000 00000 30 ~ 7 000000 00000 00000 5 ~ 1 000000 :00000000 00000 06
- 0000 000000 0000 0000 000000 :000000 07: T / T 000000000 00000 0000 0000 0000 00000000 0000000
- 00 0000 000000 000000 :000000 08 DHL 000000000 TNT UPS EMS 0000000000 000000 00000 0000 00 000000 00000
- 00 000000 000000 00000 0000000 00000 000000.

### ضمان الجودة

- 00000 0000000000 00 00000000 000000 0000 00 0000 0000000 00000 000000 00000 ACM Goldbridge 000000 00000 00000
- .000000000 0000000000
- 0000 00000 00 000000 0000 - ACM Goldbridge CAHRGE .000000000 0000 0000 000000
- 000000000 00000 000000000 0000 000000000000 00 00000 -.

## 00000000

### ACM 000000 Goldbridge 0000000000 00000000

0000000 00 000000 00000000 00000 00 0000000 RFID 0000 00000000 00 0000000000000 000000000 00000000 00000000 00000000  
00000000 00 00000000 0000000 0000000 0000 00000 0000000 000000 0000000 .00000000 00000 20 00000 00000000 0000 00  
0000 RFID. 0000000 :00 0000000 0000000 0000000 RFID Keyfob RFID 0000000 RFID 0000000 RFID 0000000 RFID  
00000 0000000000 UHF 00000000 00 00000000 00000 00000 00000 0000 .0000000000 000000000 0000000 0000000 00000.

